




SLP (UK) LIMITED
LIGHTING & CEILING COMPONENTS

P5 Glare Control

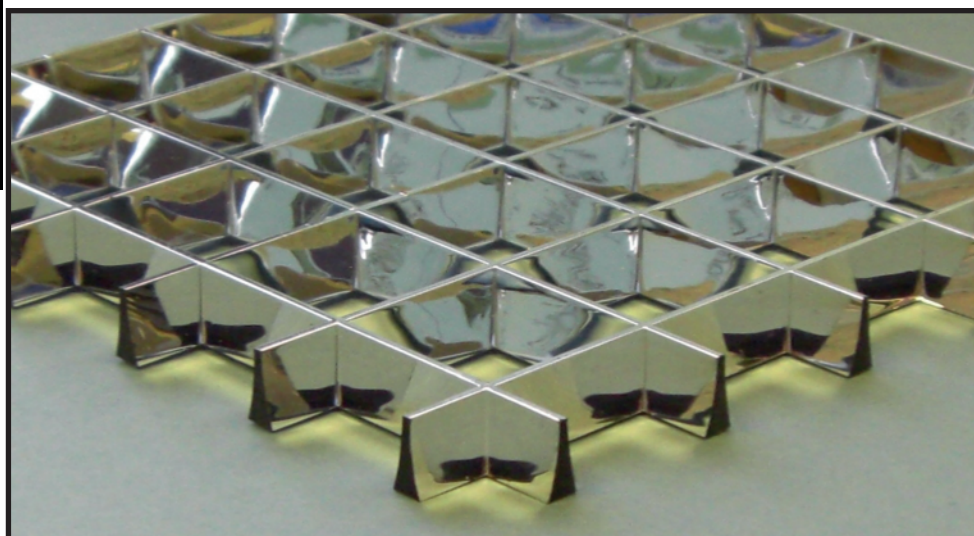

The P5 Louvre is the least expensive product in the Para-square range with the shallowest cell configuration. The P5 is the low brightness louvre of choice when energy budgeting and controlled luminance are critical. The flat backed 20x20x9mm cells enable the louvre to maintain 99% of its light distribution in the 0-60 zone.

The vacuum metalised surface serves to enhance the light output. P5 Louvres can be supplied in either standard sizes or cut to customer's individual requirements.

Product Data	P5 Glare Control
Cell Size	20 x 20 x 9 mm
Moulded Panel Size	1195 x 595 mm 1213 x 603 mm
Material	Polystyrene / Acrylic
Packed Per Carton	15 pcs
Weight per Carton	14 kg
Carton Size	1240 x 640 x 95 mm
Colours Available	Mirror Silver Additional Colours Available, Special Order
Stocked Sizes	1213 x 603 mm 1195 x 595 mm 595 x 595 mm
Non Standard Sizes	Cut to order / balance cutting to special order

Metalised Louvres




SLP
(UK) LIMITED
LIGHTING & CEILING COMPONENTS

P5 Glare Control

P5 louvres are ideally suited to the following applications:

Retail outlets, Retail POS display, Conferencing areas, Lifts, Refurbishment projects, Task lighting, Display lighting, Video conferencing, Cruise ships, Office Lighting (medium use), Car Showroom

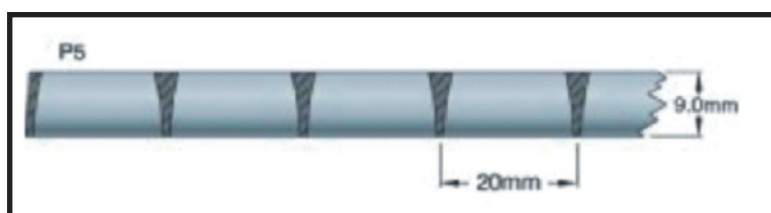

Composition and Colours

P5 lighting controllers are fine quality injection moulded products produced from either polystyrene or acrylic (PMMA) resin. The various coloured metalised coatings are applied using a state of the art metalising process.

Appearance

The P5 louvre is a high efficiency parabolic cellular panel with a fixed cell size of 20 x 20 x 9mm. The standard specular silver appearance gives an attractive and pleasing visual effect. Other metalised colours and satin finishes are available to order.

Para-square louvres can be cut to size using specialist circular saw equipment. A symmetrical (balanced) cutting service can be provided upon request. For further information, please contact our sales office.

Fabrication

A fabrication service is not available on this product.

Framing

A framing service is not available on this product.

Photometric Performance

Photometric data on this product can be obtained from our web page by clicking on the "Photometrics" link or by contacting our sales office.

Handling and Maintenance

Health and Safety issues must be carefully assessed at all times. When handling panels, clean dry lint free gloves should be worn. Care should be taken not to touch inside the cells even with gloves as this can have a damaging effect on the metalised coating. Metalised louvres can be cleaned by light dry dusting or blowing off with a clean oil free airline.

Metalised Louvres